


USB-OH123 Installation Guide

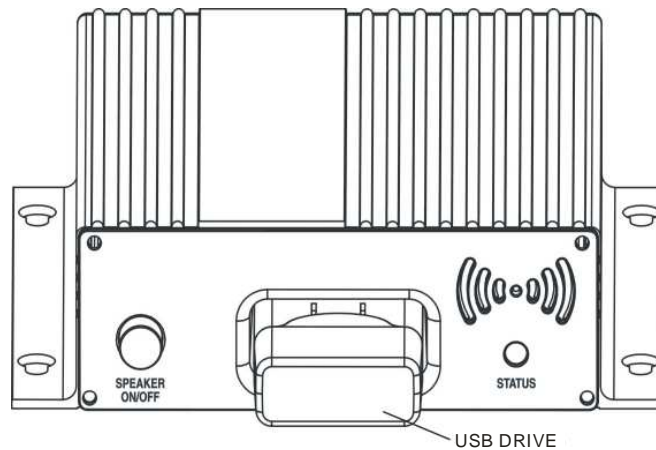

The USB-OH123 system will play the built-in internal generic on-hold message if you remove the USB Drive from the player. Inserting the USB Thumb Drive will automatically start playing any messages on the USB Drive within 10 seconds.

Use 64kbps or greater Stereo MP3 files for best audio quality.

1. Wall Mounting: Mount the USB-OH123 to a clean, dry surface using the screws supplied with your player.
2. Shelf Mounting: Apply the non-marring feet to the bottom of the player.
3. Using the supplied audio cable connect the 600 ohm audio output on the digital player to the music on hold jack located on the key service unit.
4. Connect the AC wall transformer to the power jack on the digital player and plug the transformer into the wall outlet.
5. Insert MOH Drive into the front of the USB-OH123.
6. The audio will start playing in about 5 to 10 seconds. The audio may be previewed by turning the speaker on. Always turn speaker off for normal use.
7. Use the volume control on the USB-OH123 to adjust the volume to the desired level.

New Message

1. Remove the MOH DRIVE from the USB-OH123 player. Insert the MOH DRIVE into the USB port of any computer that contains the new message or messages to be transferred. A USB extension cable is included if needed.
2. Wait approximately 30 seconds for the computer to recognize the MOH Drive.
3. Double click on My Computer, double click on the MOH DRIVE to display its contents. If "MOH Drive" is not in the list, remove (wait 5 seconds) and re-insert the drive.
4. Delete any unwanted messages on the MOH DRIVE.
5. Drag and drop or copy and paste any new message file to the MOH DRIVE.
6. Take the USB FLASH DRIVE back to the PD-USB40 and insert the drive into the player. The new message will start playing in about 5 to 10 seconds.